

首页信息

Aptio Setup - AMI

Main Advanced Chipset Security Boot Save & Exit

BIOS Information

BIOS Vendor American Megatrends
Core Version 5.17
Compliance UEFI 2.7; PI 1.6
Build Date and Time 06/19/2023 21:55:42
Access Level Administrator

Memory Information

Total Memory Total Memory: 16384 MB
(DDR4)

System Language

[English]

System Date

[Fri 06/23/2023]

System Time

[11:05:29]

Choose the system default language

→→: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F8: Previous Values

F9: Optimized Defaults

F10: Save & Exit

ESC: Exit

TPM

Aptio Setup - AMI

Main **Advanced** Chipset Security Boot Save & Exit

▶ Trusted Computing
▶ AMD fTPM configuration
▶ ACPI Settings
▶ Demo Board
▶ IT8613 Super IO Configuration
▶ Hardware Monitor
▶ UEFI Variables Protection
▶ CPU Configuration
▶ IDE Configuration
▶ Debug Port Table Configuration
▶ SIO Common Setting
▶ PCI Subsystem Settings
▶ USB Configuration
▶ Network Stack Configuration
▶ CSM Configuration
▶ NVMe Configuration
▶ Offboard SATA Controller Configuration

▶ AMD PBS
▶ AMD CBS
▶ Realtek PCIe GBE Family Controller (MAC:0A:E0:AF:CB:02:23)

Trusted Computing Settings

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

TPM 2.0 Device Found		Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.
Firmware Version:	3.84	
Vendor:	AMD	
Security Device Support	[Enable]	
Active PCR banks	SHA256	
Available PCR banks	SHA256	
SHA256 PCR Bank	[Enabled]	
Pending operation	[None]	
Platform Hierarchy	[Enabled]	
Storage Hierarchy	[Enabled]	
Endorsement Hierarchy	[Enabled]	
Physical Presence Spec Version	[1.3]	
TPM 2.0 InterfaceType	[CRB]	
Device Select	[Auto]	
Disable Block Sid	[Disabled]	

→→: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F8: Previous Values
 F9: Optimized Defaults
 F10: Save & Exit
 ESC: Exit

睡眠

Aptio Setup - AMI

Main Advanced Chipset Security Boot Save & Exit

- ▶ Trusted Computing
- ▶ AMD fTPM configuration
- ▶ ACPI Settings
- ▶ Demo Board
- ▶ IT8613 Super IO Configuration
- ▶ Hardware Monitor
- ▶ UEFI Variables Protection
- ▶ CPU Configuration
- ▶ IDE Configuration
- ▶ Debug Port Table Configuration
- ▶ SIO Common Setting
- ▶ PCI Subsystem Settings
- ▶ USB Configuration
- ▶ Network Stack Configuration
- ▶ CSM Configuration
- ▶ NVMe Configuration
- ▶ Offboard SATA Controller Configuration

- ▶ AMD PBS
- ▶ AMD CBS
- ▶ Realtek PCIe GBE Family Controller (MAC:0A:E0:AF:CB:02:23)

System ACPI Parameters.

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

ACPI Settings

Enable ACPI Auto Configuration	[Disabled]
Enable Hibernation	[Enabled]
ACPI Sleep State	[S3 (Suspend to RAM)]

Select the highest ACPI sleep state the system will enter when the SUSPEND button is pressed.

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

温控

Aptio Setup - AMI

Main **Advanced** Chipset Security Boot Save & Exit

- ▶ Trusted Computing
- ▶ AMD fTPM configuration
- ▶ ACPI Settings
- ▶ Demo Board
- ▶ IT8613 Super IO Configuration
- ▶ Hardware Monitor
- ▶ UEFI Variables Protection
- ▶ CPU Configuration
- ▶ IDE Configuration
- ▶ Debug Port Table Configuration
- ▶ SIO Common Setting
- ▶ PCI Subsystem Settings
- ▶ USB Configuration
- ▶ Network Stack Configuration
- ▶ CSM Configuration
- ▶ NVMe Configuration
- ▶ Offboard SATA Controller Configuration

▶ AMD PBS

▶ AMD CBS

▶ Realtek PCIe GBE Family Controller (MAC:0A:E0:AF:CB:02:23)

Monitor hardware status

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

Pc Health Status

System temperature1 : +47 ℃
System temperature2 : +38 ℃
CPU Fan Speed : 1436 RPM
System Fan Speed : N/A
VIN0 : +1.243 V
VDDIO MEM : +1.276 V
VCC12 : +12.144 V
VCC5 : +4.972 V
VBAT : +3.014 V

CPU Smart Fan [Automatic Mode]

- Fan off temperature limit 40
- Fan start temperature limit 45
- Fan Full Speed temperature 70
- Fan start PWM(%) 50
- PWM Slope Setting(%) 30

CPU Smart Fan Setting

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

虚拟化

Aptio Setup - AMI

Main Advanced Chipset Security Boot Save & Exit

- ▶ Trusted Computing
- ▶ AMD fTPM configuration
- ▶ ACPI Settings
- ▶ Demo Board
- ▶ IT8613 Super IO Configuration
- ▶ Hardware Monitor
- ▶ UEFI Variables Protection
- ▶ CPU Configuration
- ▶ IDE Configuration
- ▶ Debug Port Table Configuration
- ▶ SIO Common Setting
- ▶ PCI Subsystem Settings
- ▶ USB Configuration
- ▶ Network Stack Configuration
- ▶ CSM Configuration
- ▶ NVMe Configuration
- ▶ Offboard SATA Controller Configuration

▶ AMD PBS

▶ AMD CBS

▶ Realtek PCIe GBE Family Controller (MAC:0A:E0:AF:CB:02:23)

CPU Configuration Parameters

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

CPU Configuration

Module Version: ComboAm4v2Cpu 11
AGESA Version : ComboAm4v2PI 1207

PSS Support [Enabled]
PPC Adjustment [PState 0]
NX Mode [Enabled]
SVM Mode 虚拟化 [Enabled]

▶ Node 0 Information

Enable/disable the generation of ACPI _PPC, _PSS, and _PCT objects.

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

- ▶ Trusted Computing
- ▶ AMD fTPM configuration
- ▶ ACPI Settings
- ▶ Demo Board
- ▶ IT8613 Super IO Configuration
- ▶ Hardware Monitor
- ▶ UEFI Variables Protection
- ▶ CPU Configuration
- ▶ IDE Configuration
- ▶ Debug Port Table Configuration
- ▶ SIO Common Setting
- ▶ PCI Subsystem Settings
- ▶ USB Configuration
- ▶ Network Stack Configuration
- ▶ CSM Configuration
- ▶ NVMe Configuration
- ▶ Offboard SATA Controller Configuration

- ▶ AMD PBS
- ▶ AMD CBS
- ▶ Realtek PCIe GBE Family Controller (MAC:0A:E0:AF:CB:02:23)

PCI, PCI-X and PCI Express Settings.

→←: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help


F8: Previous Values

F9: Optimized Defaults

F10: Save & Exit

ESC: Exit

4G解码 SR-IOV Re-size Bar

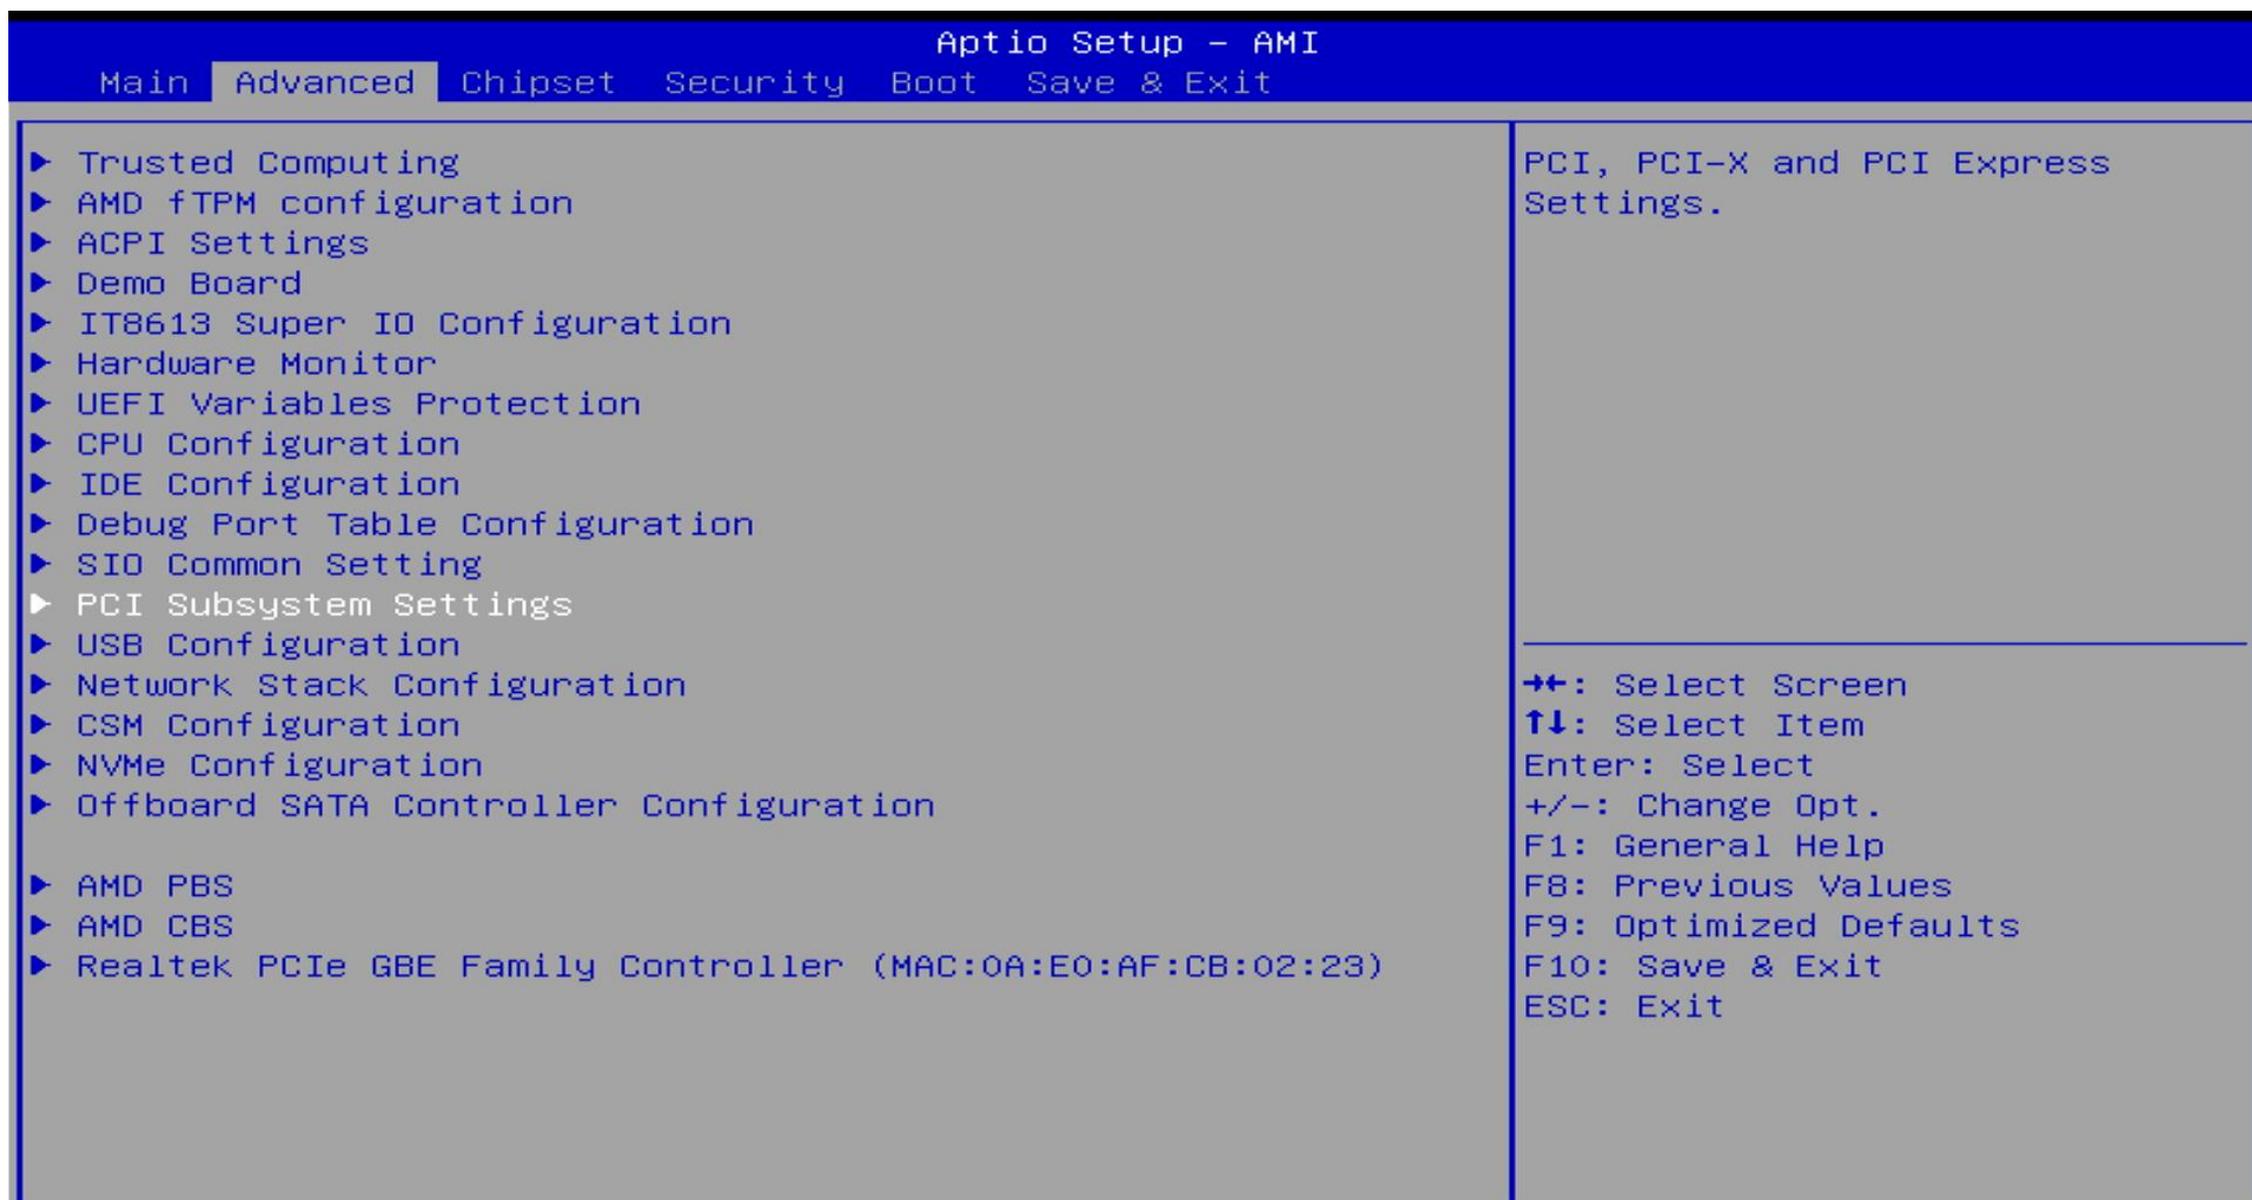

PCI Bus Driver Version A5.01.20

PCI Devices Common Settings:

PCI Latency Timer [32 PCI Bus Clocks]

PCI-X Latency Timer [64 PCI Bus Clocks]

VGA Palette Snoop [Disabled]

PERR# Generation [Disabled]

SERR# Generation [Disabled]

Above 4G Decoding [Enabled]

Re-Size BAR Support [Disabled]

SR-IOV Support

BME DMA Mitigation


Above 4G Decoding
Disabled
Enabled

Enables or Disables 64bit capable Devices to be Decoded in Above 4G Address Space (Only if System Supports 64 bit PCI Decoding).

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

打开4G解码选项才会出现 Re-Size BAR选项

UEFI网卡启动

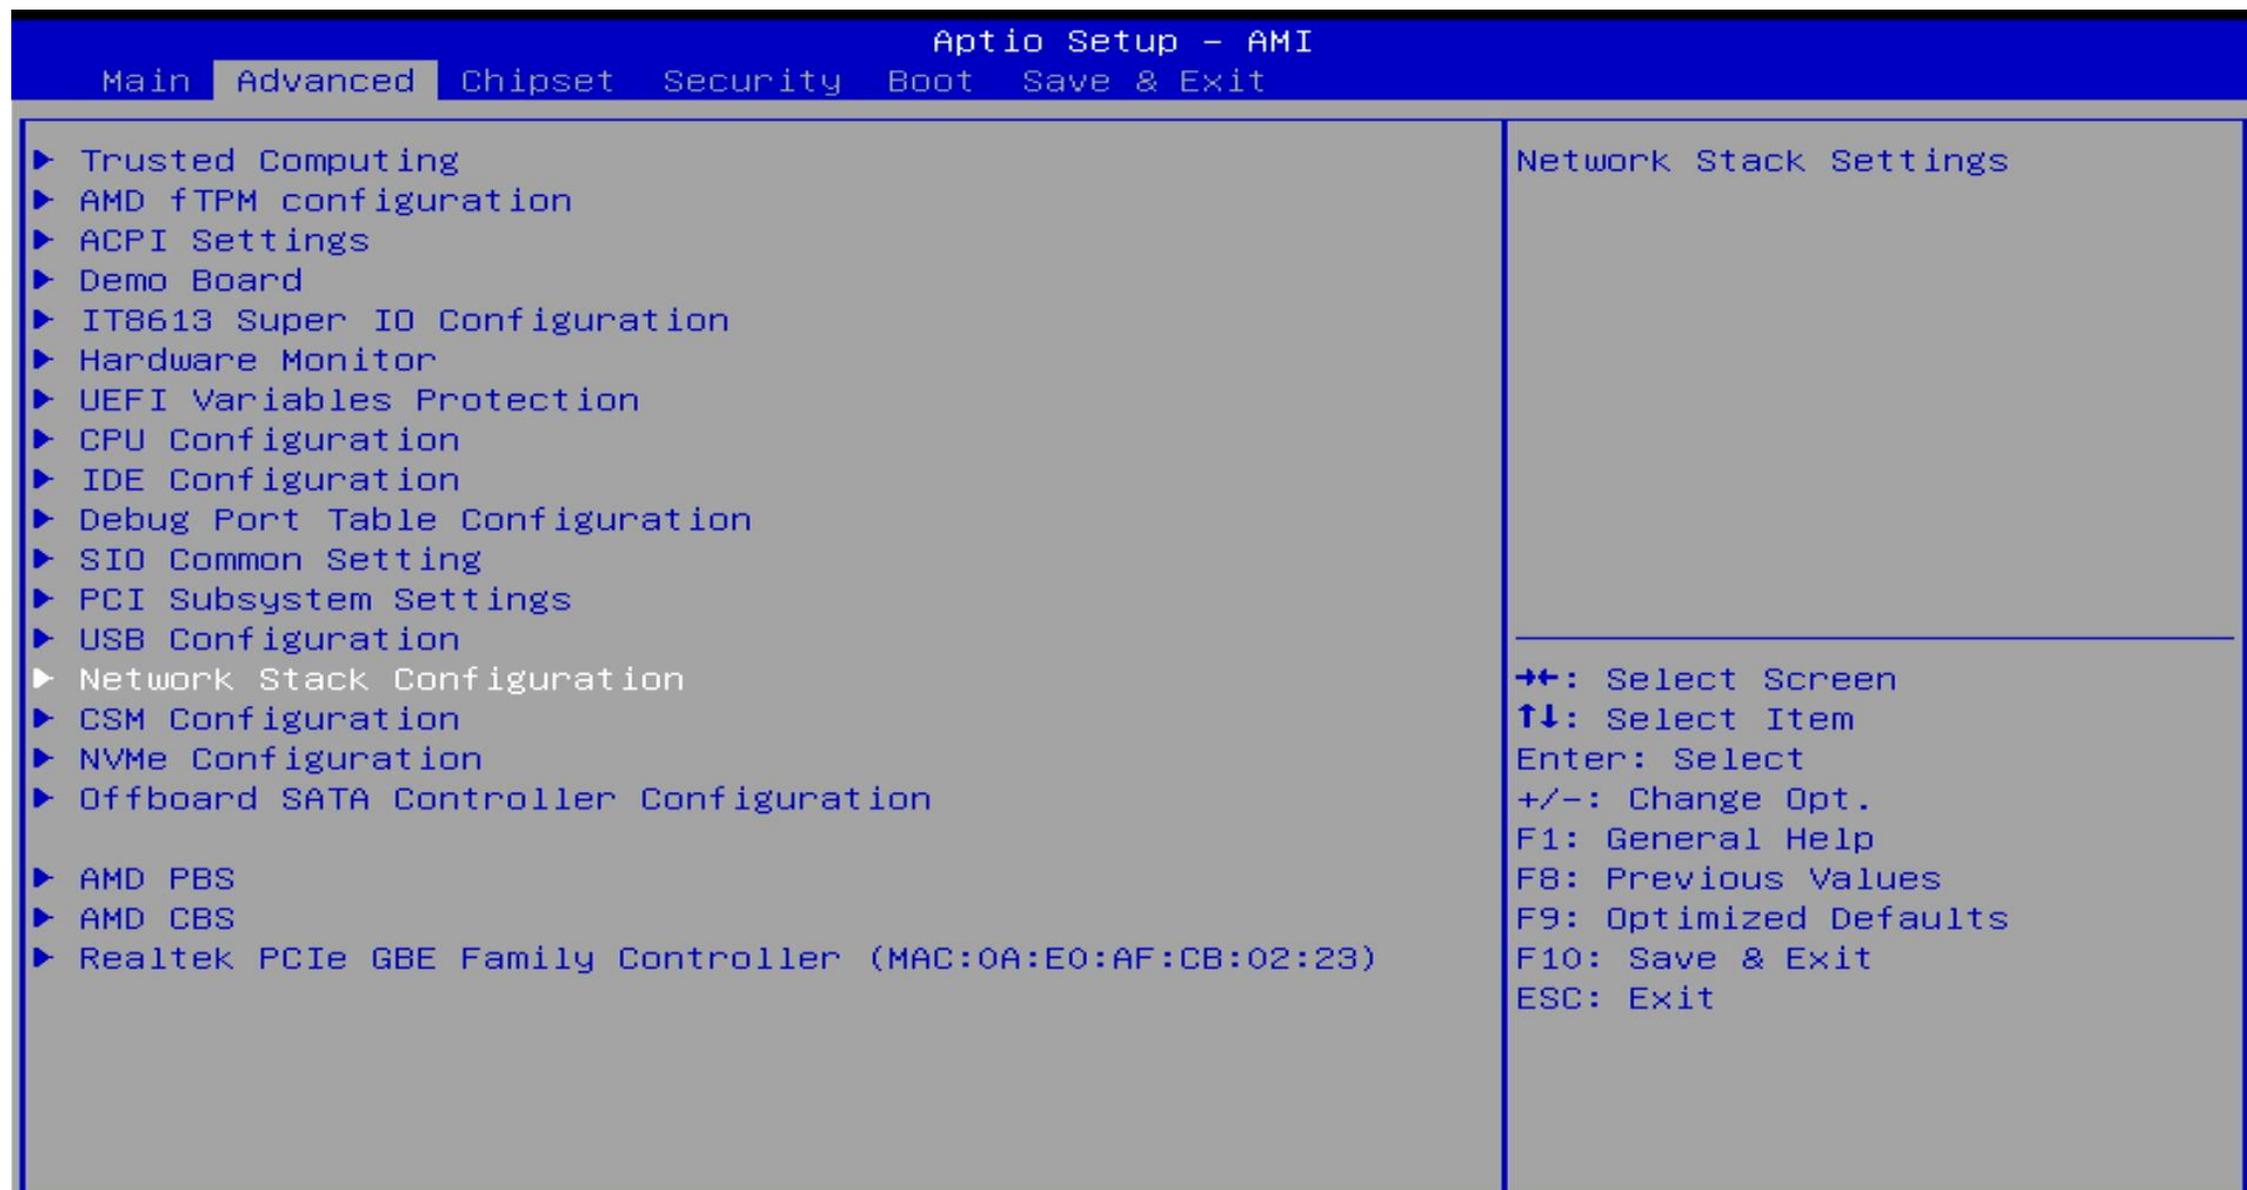

Network Stack	[Enabled]
IPv4 PXE Support	[Enabled]
IPv4 HTTP Support	[Disabled]
IPv6 PXE Support	[Disabled]
IPv6 HTTP Support	[Disabled]
PXE boot wait time	0
Media detect count	1

Enable/Disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

传统网卡启动

Aptio Setup - AMI

Main Advanced Chipset Security Boot Save & Exit

- ▶ Trusted Computing
- ▶ AMD fTPM configuration
- ▶ ACPI Settings
- ▶ Demo Board
- ▶ IT8613 Super IO Configuration
- ▶ Hardware Monitor
- ▶ UEFI Variables Protection
- ▶ CPU Configuration
- ▶ IDE Configuration
- ▶ Debug Port Table Configuration
- ▶ SIO Common Setting
- ▶ PCI Subsystem Settings
- ▶ USB Configuration
- ▶ Network Stack Configuration
- ▶ CSM Configuration
- ▶ NVMe Configuration
- ▶ Offboard SATA Controller Configuration

▶ AMD PBS

▶ AMD CBS

▶ Realtek PCIe GBE Family Controller (MAC:0A:E0:AF:CB:02:23)

CSM configuration:
Enable/Disable, Option ROM
execution settings, etc.

←→: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit


Compatibility Support Module Configuration

Enable/Disable CSM Support.

CSM Support	[Enabled]
CSM16 Module Version	07.84
GateA20 Active	[Upon Request]
Option ROM Messages	[Force BIOS]
INT19 Trap Response	[Immediate]
HDD Connection Order	[Adjust]
Boot option filter	[UEFI and Legacy]
Option ROM execution	
Network 传统网卡启动	[Do not launch]
Storage	[Legacy]
Video	[Legacy]
Other PCI devices	[UEFI]

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

内存频率

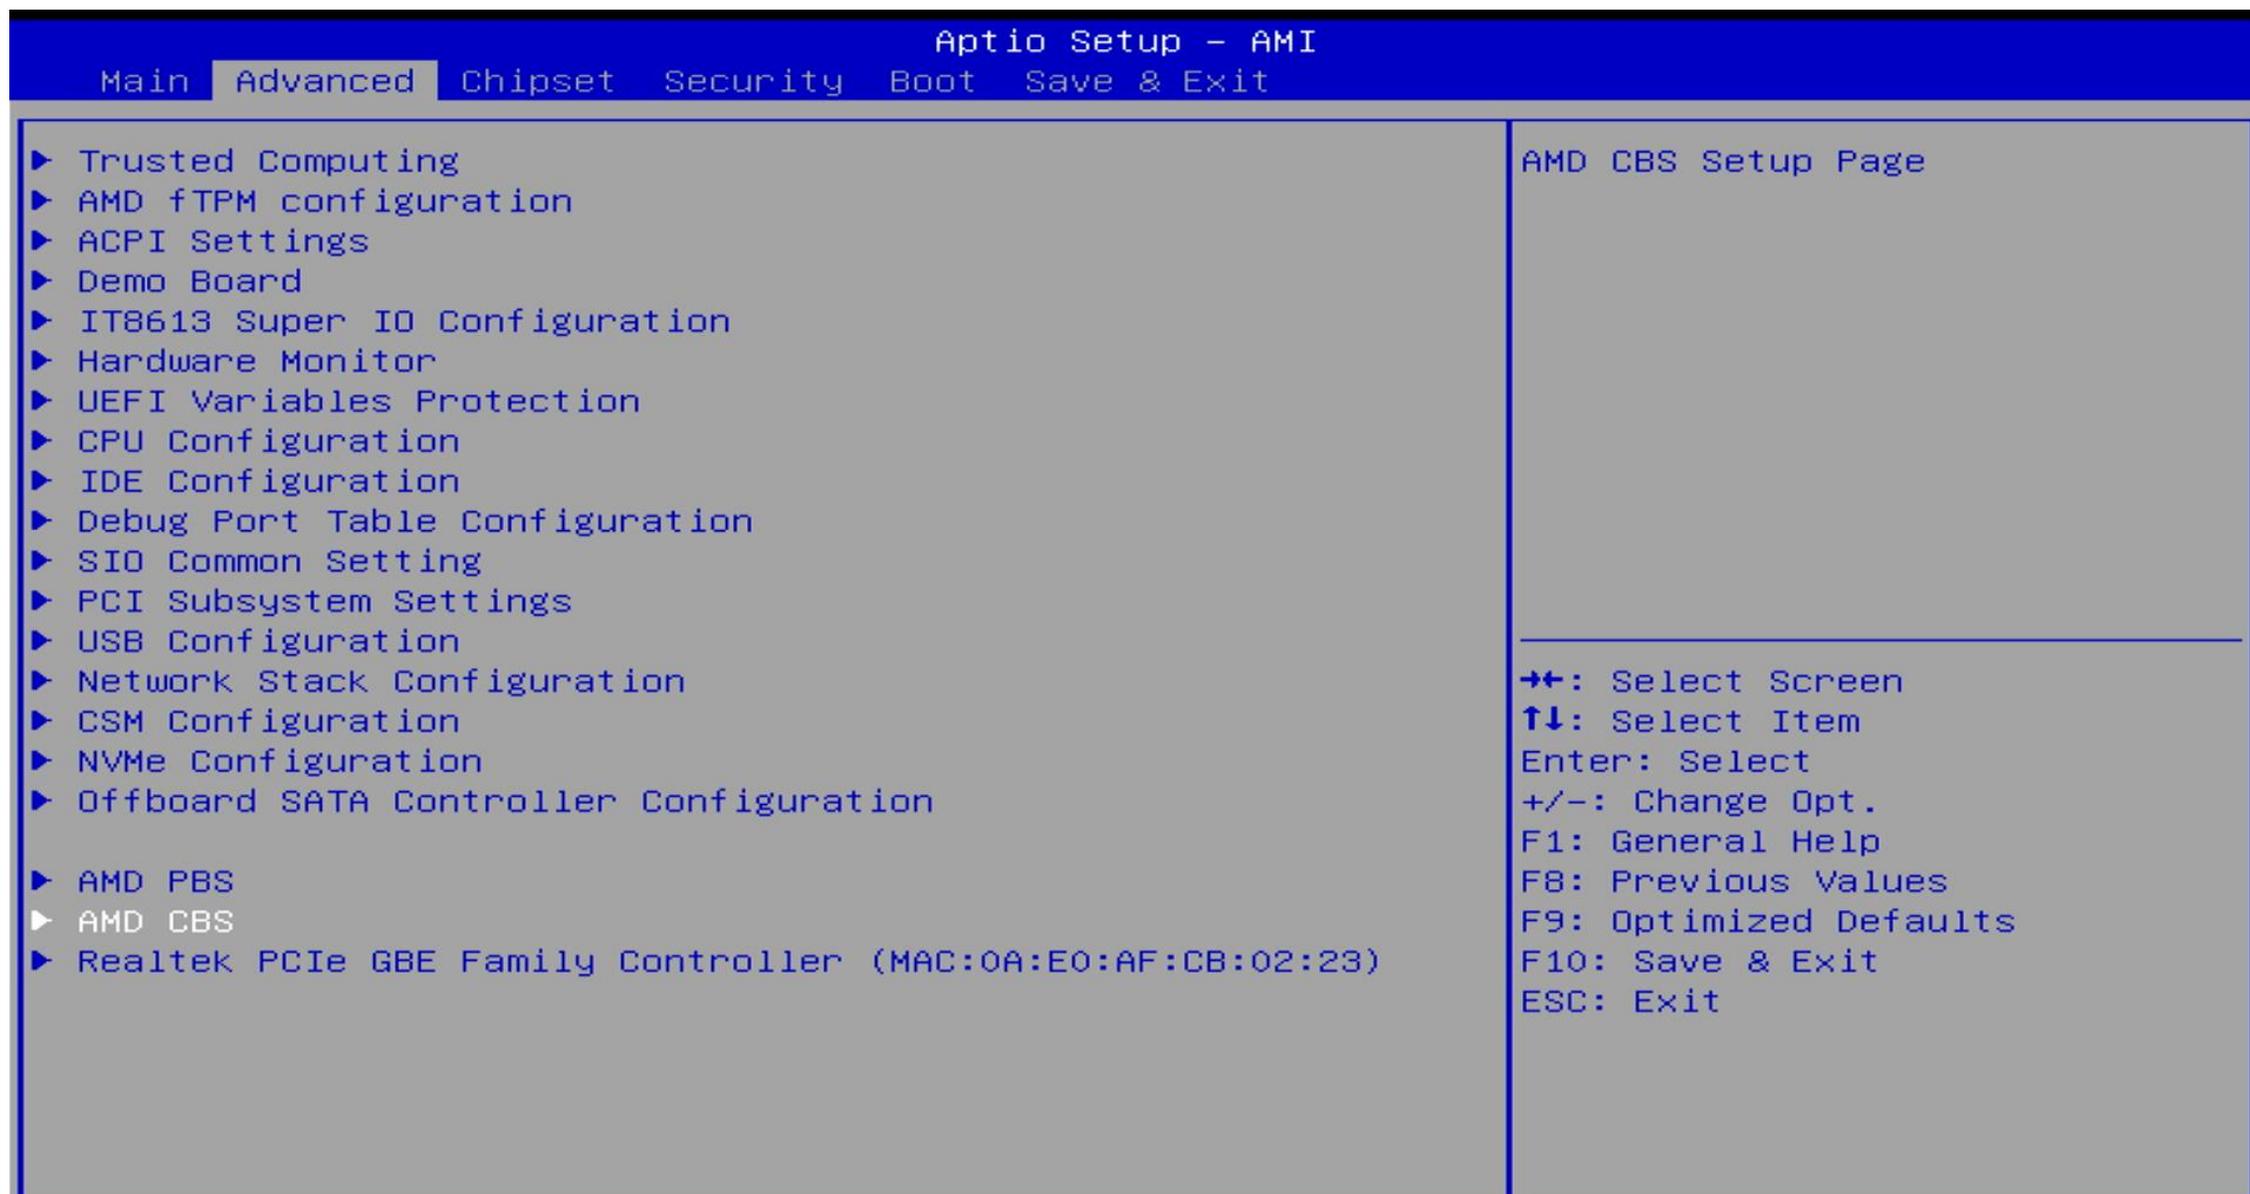

AMD CBS

- ▶ CPU Common Options
- ▶ DF Common Options
- ▶ UMC Common Options
- ▶ NBIO Common Options
- ▶ FCH Common Options
- ▶ Soc Miscellaneous Control
- ▶ Chipset Common Options

UMC Common Options

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

UMC Common Options

- ▶ DDR4 Common Options
- ▶ DRAM Memory Mapping
- ▶ Phy Configuration
- ▶ NVDIMM
- ▶ Memory MBIST

DDR4 Common Options

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

DDR4 Common Options

- ▶ DRAM Timing Configuration
- ▶ DRAM Controller Configuration
- ▶ CAD Bus Configuration
- ▶ Data Bus Configuration
- ▶ Common RAS
- ▶ Security

DRAM Timing Configuration

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

DRAM Timing Configuration

WARNING - DAMAGE CAUSED BY USE OF YOUR AMD PROCESSOR OUTSIDE OF SPECIFICATION OR IN EXCESS OF FACTORY SETTINGS ARE NOT COVERED UNDER YOUR AMD PRODUCT WARRANTY AND MAY NOT BE COVERED BY YOUR SYSTEM MANUFACTURER'S WARRANTY. Operating your AMD processor outside of specification or in excess of factory settings, including but not limited to overclocking, may damage or shorten the life of your processor or other system components, create system instabilities (e.g., data loss and corrupted images) and in extreme cases may result in total system failure. AMD does not provide support or service for issues or damages related to use of an AMD processor outside of processor specifications or in excess of factory settings.

- ▶ Decline
- ▶ Accept

Accept

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

Accept		
Overclock		[Enabled]
Memory Clock Speed	这里选想达到的频率的一半	[1600MHz]
Tcl		[16 C1k]
Tcmdrd	内存时序可用CPU-Z查看	[18 C1k]
Tcmdwr		[18 C1k]
Trp		[18 C1k]
Tras		[36 C1k]
Trc Ctrl		[Auto]
TrrdS		[Auto]
TrrdL		[Auto]
Tfaw Ctrl		[Auto]
TwtrS		[Auto]
TwtrL		[Auto]
Twr Ctrl		[Auto]
Trcpage Ctrl		[Auto]
TrdrdScL Ctrl		[Auto]
TwrwrScL Ctrl		[Auto]
Trfc Ctrl		[Auto]
Trfc2 Ctrl		[Auto]
Trfc4 Ctrl		[Auto]
Tcw1		[Auto]
Trtp		[Auto]
Tcke		[Auto]

▲ Specifies the Active to Precharge Delay Time.

→←: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F8: Previous Values
 F9: Optimized Defaults
 F10: Save & Exit
 ESC: Exit

Aptio Setup - AMI

Main Advanced **Chipset** Security Boot Save & Exit

Wakeup By PCIE 网络唤醒 [Enabled]
IGFX Multi Monitor 核显与独显分屏 [Disabled]
Onboard LAN Controller 板载网卡开关 [Enabled]
PWROn After PWR-Fail 来电启动 [Always Off]
▶ RTC Wake 定时开机
▶ South Bridge
▶ GFX Configuration
▶ North Bridge

Enable/Disable Wake from
PCIE-PME

→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F8: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

Password Description

If ONLY the Administrator's password is set, then this only limits access to Setup and is only asked for when entering Setup.

If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights.

The password length must be in the following range:

Minimum length	3
Maximum length	20

Administrator Password

User Password

STIBP Status [Disabled]

Set Administrator Password

-
- ←: Select Screen
 - ↑↓: Select Item
 - Enter: Select
 - +/-: Change Opt.
 - F1: General Help
 - F8: Previous Values
 - F9: Optimized Defaults
 - F10: Save & Exit
 - ESC: Exit

▶ Secure Boot 安全启动

Boot Configuration

Setup Prompt Timeout 1
 Bootup NumLock State [On]
 Quiet Boot [Enabled]

Enables or disables Quiet Boot option

Boot Option Priorities

Boot Option #1 [Windows Boot Manager
 (SKHynix_HFS512GDE9X084
 N)]
 Boot Option #2 [SKHynix_HFS512GDE9X084
 N]

Fast Boot [Enabled]
 SATA Support [Last Boot SATA
 Devices Only]
 NVMe Support [Enabled]
 VGA Support [EFI Driver]
 USB Support [Full Initial]
 PS2 Devices Support [Enabled]
 Network Stack Driver Support [Disabled]
 Redirection Support [Disabled]

→←: Select Screen
 ↑↓: Select Item
 Enter: Select
 +/-: Change Opt.
 F1: General Help
 F8: Previous Values
 F9: Optimized Defaults
 F10: Save & Exit
 ESC: Exit

Hard Drive BBS Priorities

Save Options

Save Changes and Exit

Discard Changes and Exit

Save Changes and Reset

Discard Changes and Reset

Save Changes

Discard Changes

Default Options

Restore Defaults

Save as User Defaults

Restore User Defaults

Boot Override

SKHynix_HFS512GDE9X084N

Windows Boot Manager (SKHynix_HFS512GDE9X084N)

←→: Select Screen

↑↓: Select Item

Enter: Select

+/-: Change Opt.

F1: General Help

F8: Previous Values

F9: Optimized Defaults

F10: Save & Exit

ESC: Exit